



# Assembly Drawing For Kit 74320 & Kit 74322 To Working Bench 1600 mm & 2000 mm ( Light Duty frames )


## Step 1

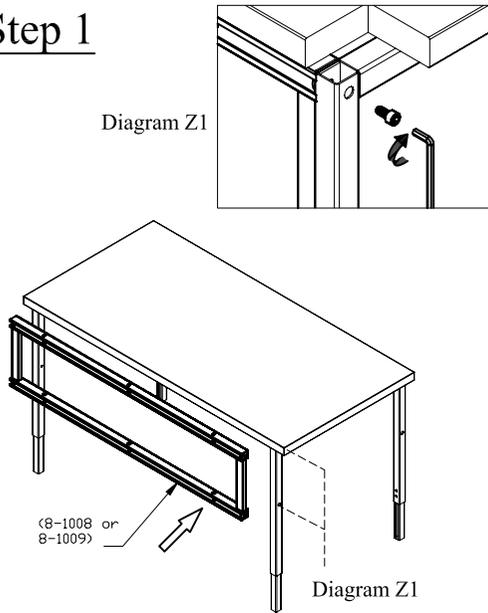


## Step 2

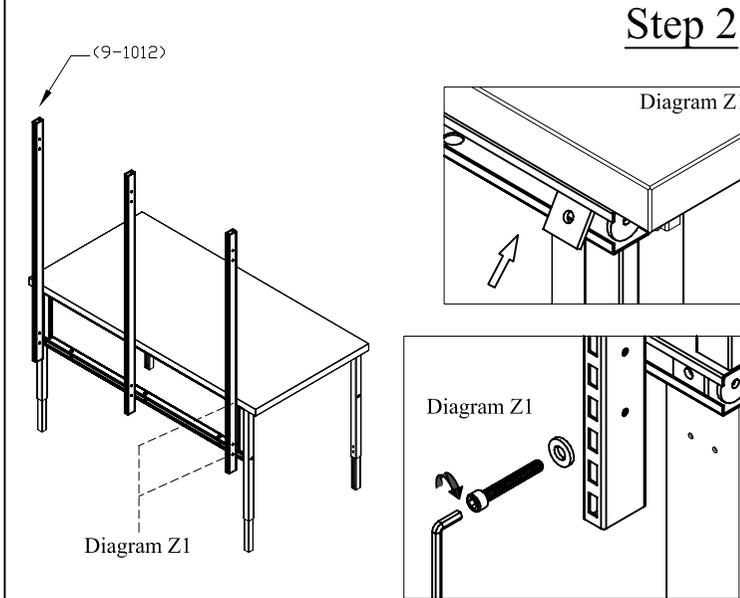


## Step 3

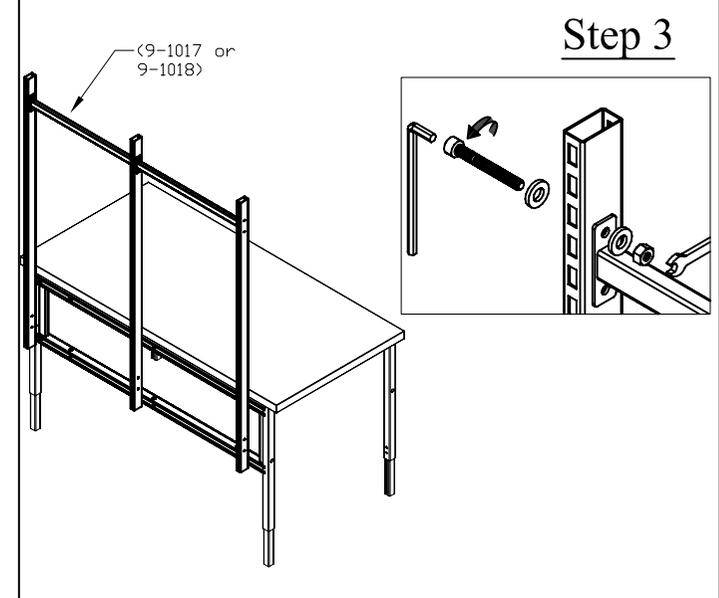

## Step 4

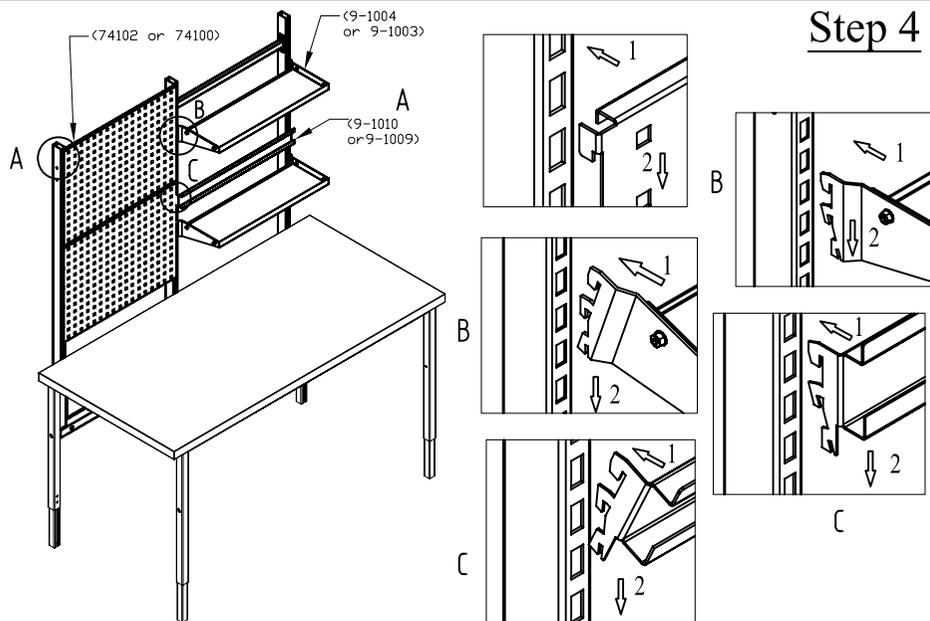

## Step 5

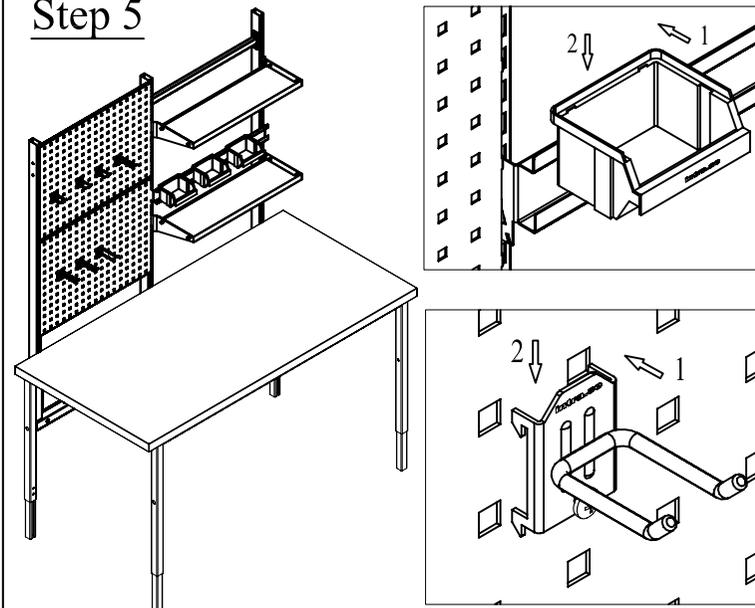

### KIT 74320 FOR WORKING BENCH 1600MM:

- (74102) PERFORATED TOOL PANEL 666x480MM: 2 PCS
- (9-1012) PERFORATED UPRIGHTS 1446MM: 3 PCS
- (9-1017) CROSS BRACE 645MM: 2 PCS
- (9-1010) SUSPENSION RAIL 645x75MM: 1 PCS
- (9-1004) SHELF 645x300MM: 2 PCS
- (8-1008) REAR FRAME 1420MM: 1 PCS
- (74113) MIXED SET OF HOOKS, 30PCS: 1 CB (ZINC)
- PLASTIC BOX 110: 5 PCS

### KIT 74322 FOR WORKING BENCH 2000MM:

- (74100) PERFORATED TOOL PANEL 896x480MM: 2 PCS
- (9-1012) PERFORATED UPRIGHTS 1446MM: 3 PCS
- (9-1016) CROSS BRACE 875MM: 2 PCS
- (9-1009) SUSPENSION RAIL 875x75MM: 1 PCS
- (9-1003) SHELF 875x300MM: 2 PCS
- (8-1009) REAR FRAME 1920MM: 1 PCS
- (74113) MIXED SET OF HOOKS, 30PCS: 1 CB (ZINC)
- PLASTIC BOX 110: 7 PCS

Includes fasteners:

1/ 06 sets of M6x40 with nuts and washers

2/ 03 pcs of Wood screws with washer 5x20mm

3/ 06 sets of M8x60 with washer 8x 30 and square nuts M8 32x32x4

4/ 04 sets M6x25 with lock nuts and washers

5/ 08 sets M6x15 with washers and nuts